


6

Remove protective film

Once adhesives and anti-pick are dry remove protective film from the mirror to complete the installation.

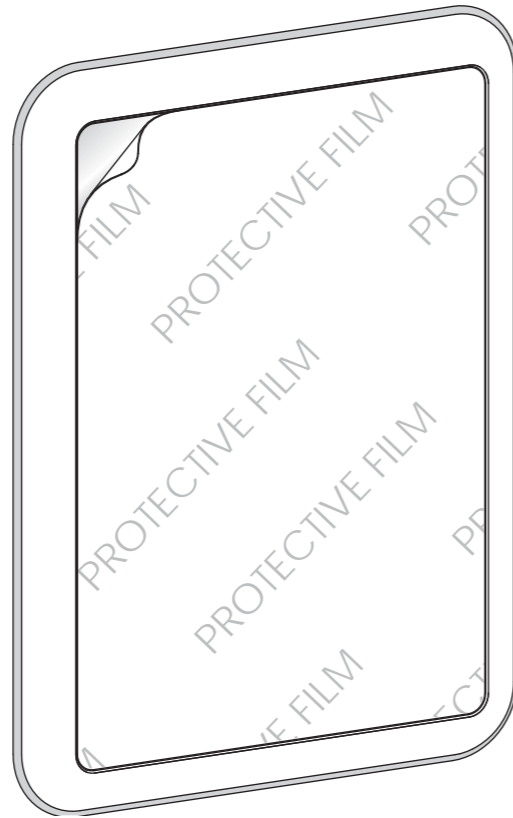

Contact

Head Office

Dart Valley Systems Ltd
Kemings Close,
Long Road,
Paignton, Devon
TQ4 7TW
UK


Contact Details

T: +44 (0) 1803 529021
F: +44 (0) 1803 559016
E: sales@dartvalley.co.uk
W: www.dartvalley.co.uk



High Security Mirror

Model: D800/M

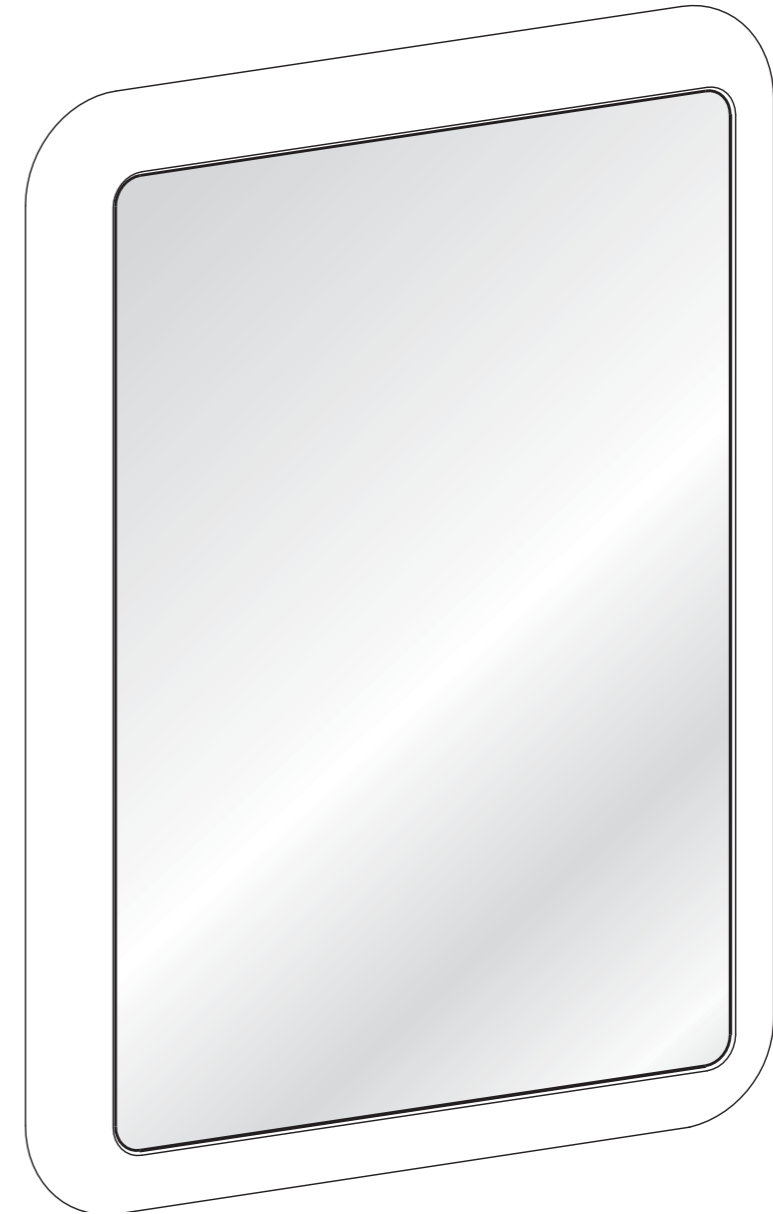


Tel: +44 (0) 1803 529021
Fax: +44 (0) 1803 559016
www.dartvalley.co.uk

1

Safety first

These instructions relate to the installation of the 'High Security Mirror' only.


IMPORTANT: Please read these instructions carefully and follow each stage in order!

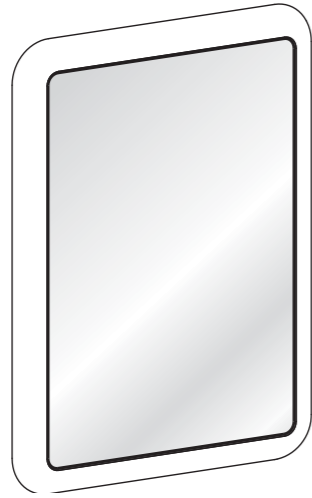

2

Kit contents

Your kit will include the following items:

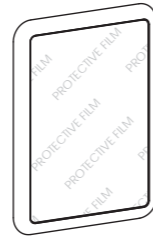

1 x High Security Mirror

NOTE: Fixings are not supplied or required. This products sole securing means is a structural adhesive.

3

Applying the adhesive

A structural adhesive is required which is the sole securing means for this product.

It may be that certain anti-pick adhesives have sufficient bonding characteristics to use as adhesive and sealant.

Plexus adhesive MA300 is used on some applications and suits the following plastics:

- ABS Acrylics (PMMA)
- Polyester (PBT, PET)
- Vinyls (PVC)
- Polyurethanes


And the following composites:

- Fibreglass
- Gelcoats
- SMC Phenoucs
- Laminates RTM.

Apply adhesive to the complete edge and all the stainless steel brackets (as illustrated in diagram opposite).

Plexus MA300 working time: 4-6 mins
Plexus MA300 fixture time: 15 mins

IMPORTANT: Be sure to leave protective film on until final stage to protect the mirror from adhesives and anti-pick.

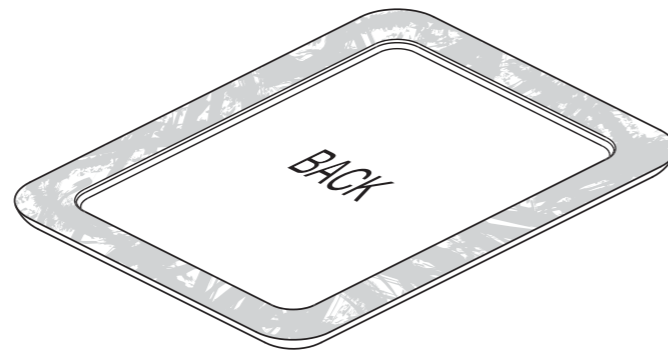

Adhesive


4

Mounting the mirror

Push the mirror against the wall and check that its level.

To provide a suitable bond, the gap depth of bonding material should be 1mm to 2mm after compressing.

Immediately clean the excess adhesive off the wall. Make sure the dish is level and leave to dry.

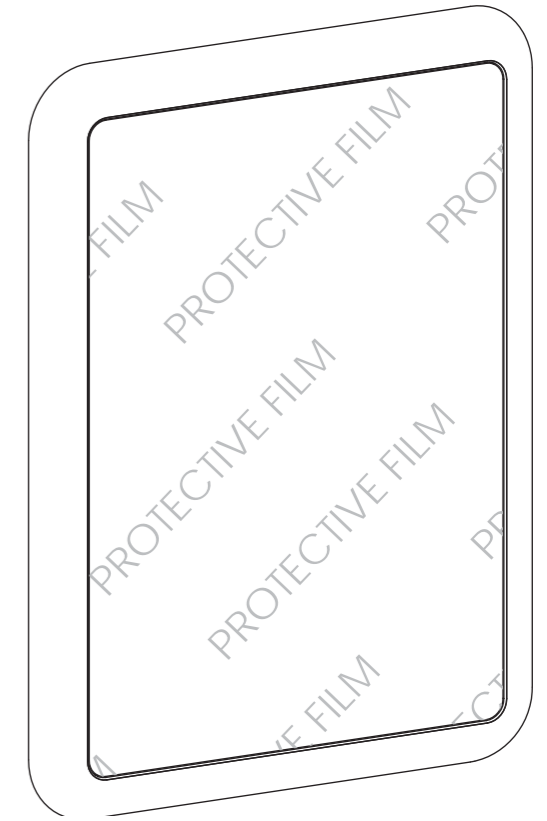

5

Applying the anti-pick

Once the adhesive is dry, complete the installation by finishing with anti-pick sealant around the full perimeter of the dish (as illustrated in diagram opposite).

This ensures no ligature gaps and adds extra support strength.

NOTE: At the time of drafting these instructions we believe all anti-pick sealants are either cream or grey, but a new white version will be available very soon.

